



## ALERTS AND ALARMS MENU

\* DISCONNECT THE POWER OF THE DEVICE, BEFORE MAKING OR CHANGING CABLE CONNECTIONS.

\* DISCONNECT THE POWER OF THE DEVICE, BEFORE CHANGING SCENARIO VIA DIPSWITCH.

\* CHECK THERMOSTAT CONNECTIONS, BEFORE OPERATING THE DEVICE.

\* IN3-C FILTER DIRTY ALARM(NO)

IT MUST BE CONNECTED TO THE NO TERMINAL OF DPS CONTACTS. IF THE INPUT IS CONNECTED TO GND, AL:03 ALARM HAPPENS. IN SCENARIOS WHERE DOES NOT CONTAIN DPS CONTACT, AT THE END OF THE SET TIME AL:03 ALARM HAPPENS.

\* IN4-C FAN ALARM (NC)

IT MUST BE CONNECTED TO THE NC TERMINAL OF THERMAL CONTACTS. IF IT IS NOT CONNECTED, AL:01 ALARM HAPPENS. IF IT IS NOT USED, INPUT MUST BE CONNECTED TO GND(C).



## SCENARIO 1: VENTILATION