

Te=Temp. external\esternaria
Tr= Temp. recovery\ripresaria
Ti=Temp. input\immissione
Tx=Temp. expelled\espulsione
Tw=Temp. water coil\ batteria acqua
DI3=Filters pressure switch line\Linea pressostati filtri
DI1-2-4-5-6=Digital input\Ingressi Digitali
PWM1=Post-heat command\comando
PWM2=Pre-heat command\comando
NC-C-NO 1-2=Digital outputs\uscite digitali

CTR08\
TOUCH PANEL\
TOUCH PANEL +
MODBUS
SEE MANUAL\
VEDI MANUALE

POST-HEAT WATER COIL VERSION\
VERSIONE BATTERIA ACQUA

COMMAND MIXING VALVE 24V0-10V
COMANDO VALVOLA MISCELATRICE 24V0-10V
MAX 5 W

OPTIONAL

CO2-RH-VOC SENSOR SENSORE			
G	G0	U2	QPA
V+	GND	RH	EE16
V+	GND	CO2	EE80


Duo+post heat
external box:probes+command+supply
scatola esterna:sonde+comandi+alim.

Tw present on return pipe
water coil(if installed)
Tw presente sul tubo di ritorno batteria acqua(se
installata)

Ti after post-heating (if installed)
Ti dopo post-risc.(se installato)

Duo->wire Tw-Ti in box external from unit
Duo->collegare Tw-Ti nella scatola est. all'unità

Diameter wires not indicate =0.75 mm2
Diametro fili non indicato=0.75mm2

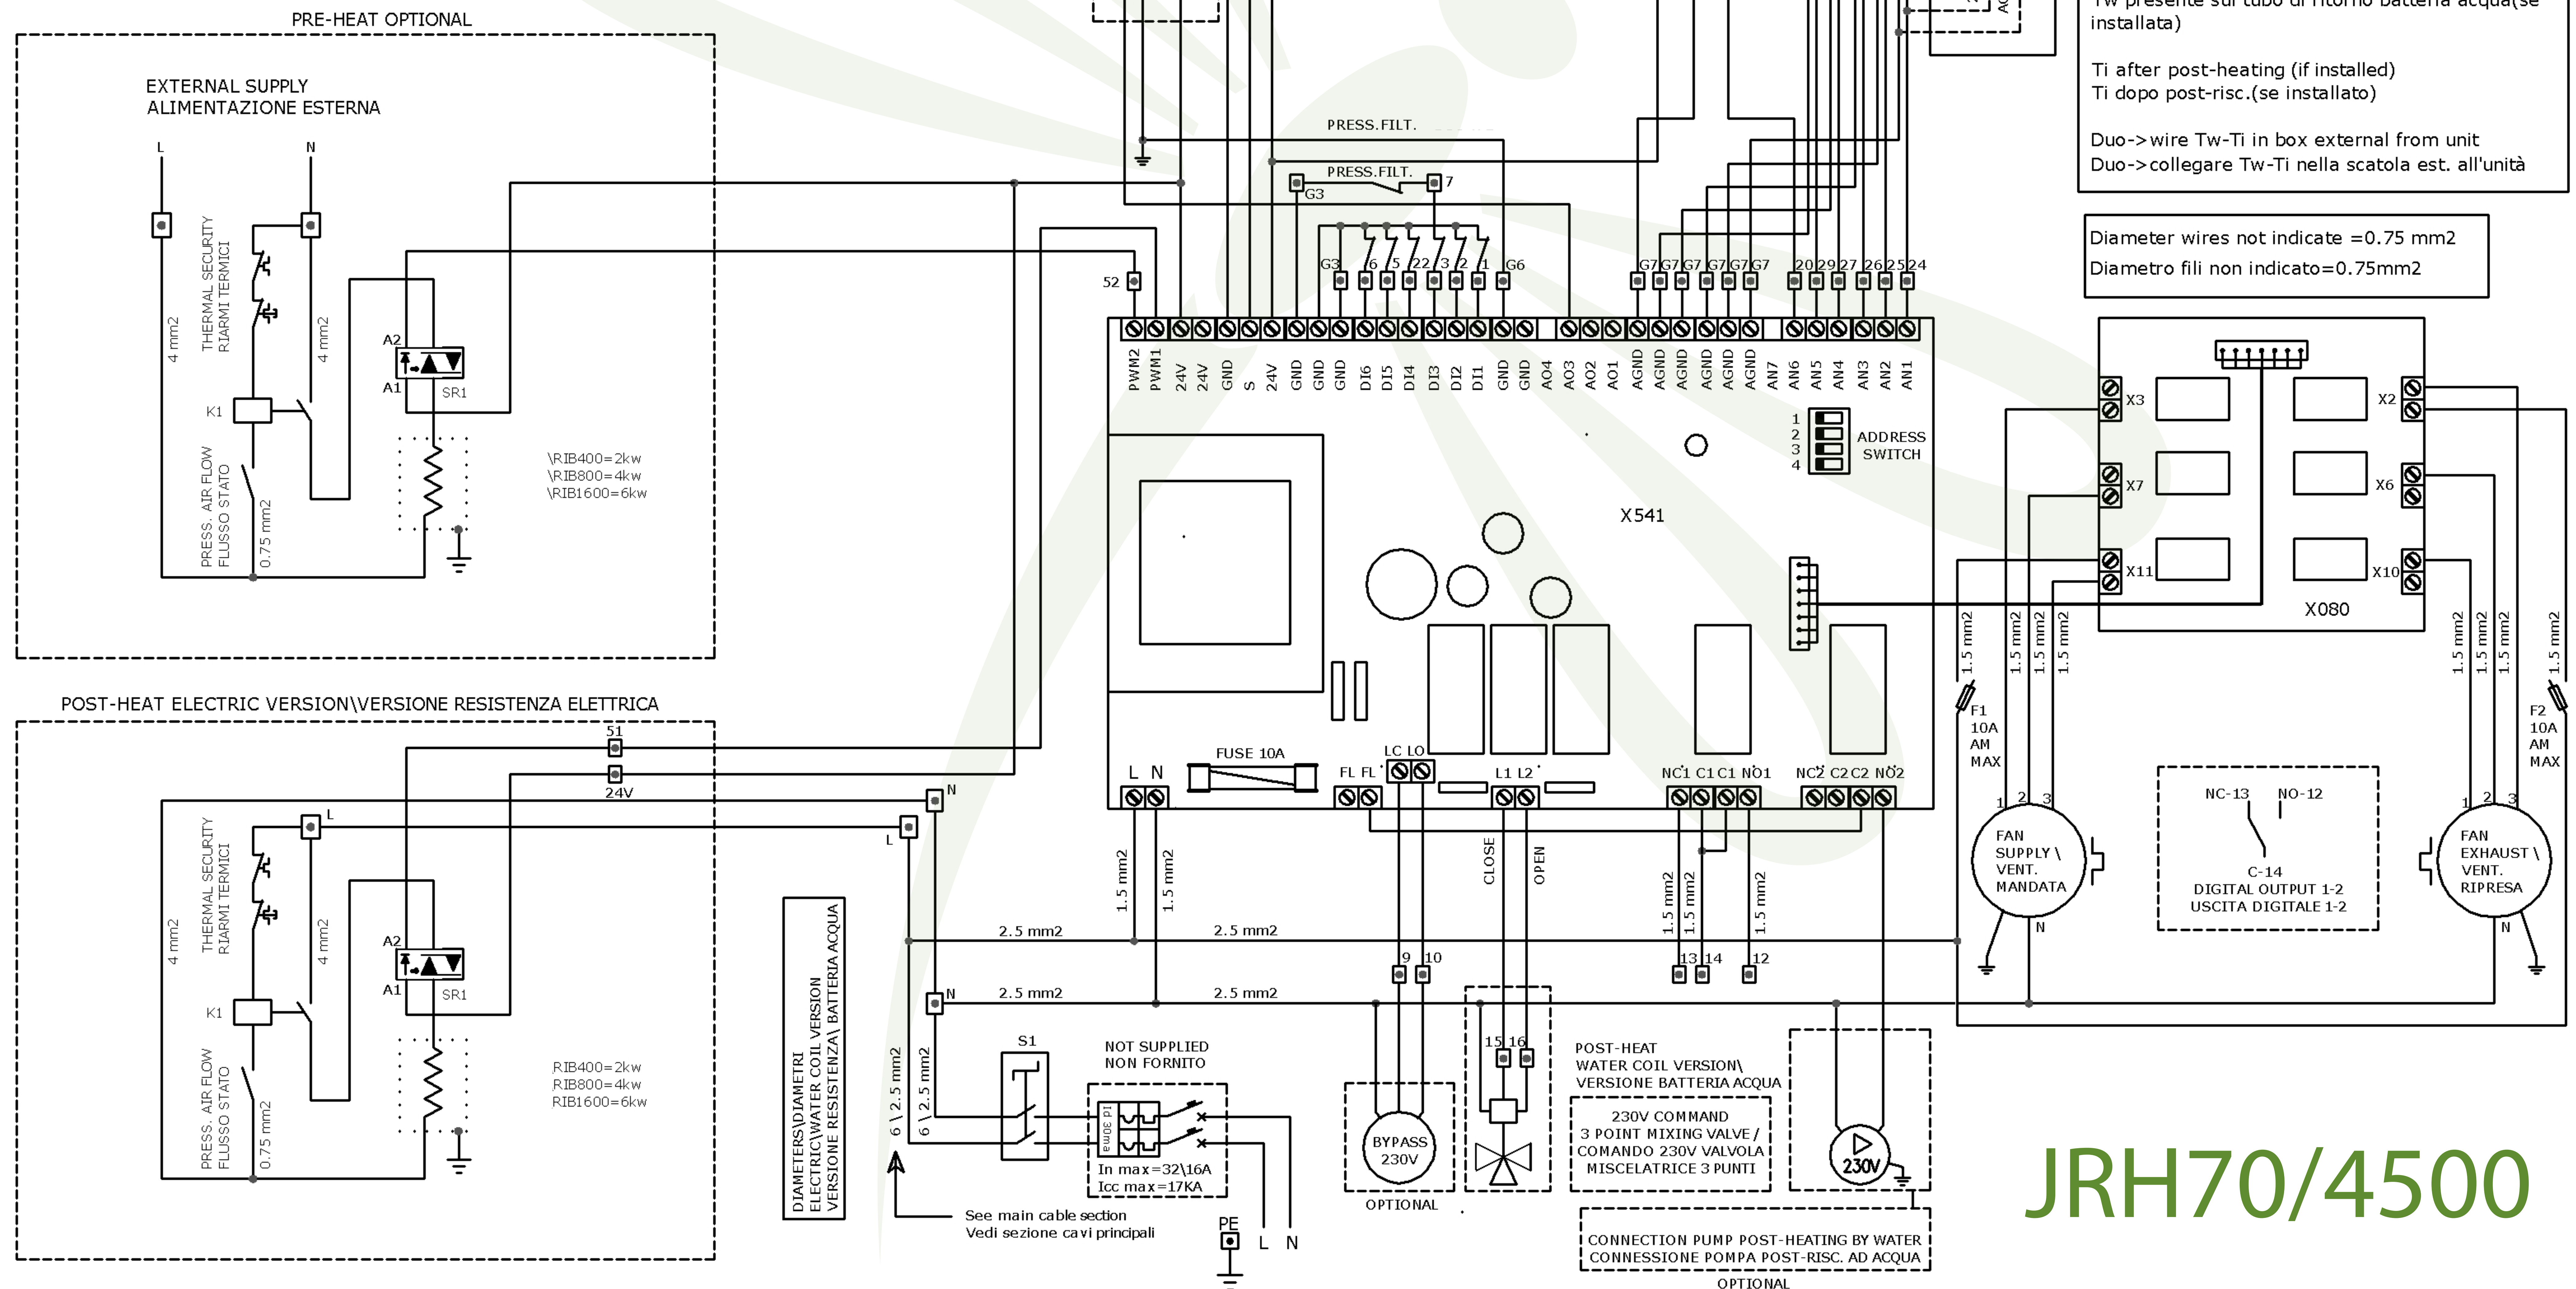

JRH70/4500